


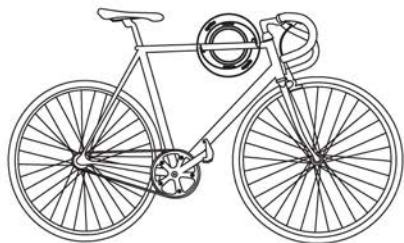


Store your bike with style


www.cycloc.com




A

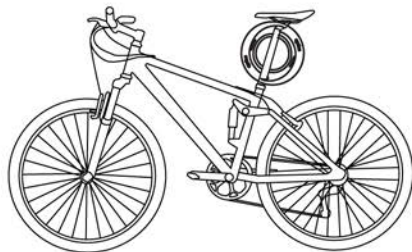


B

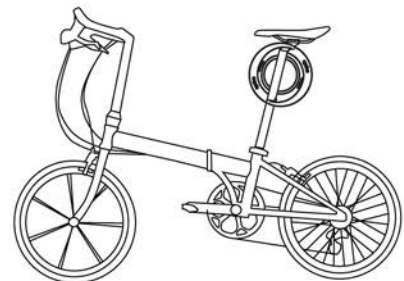


C

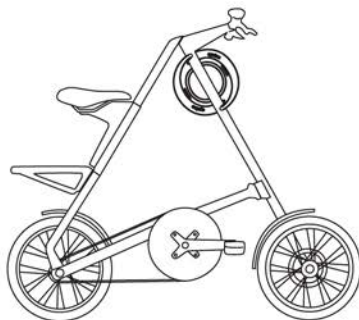



D

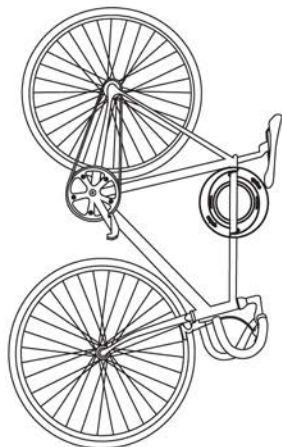

E


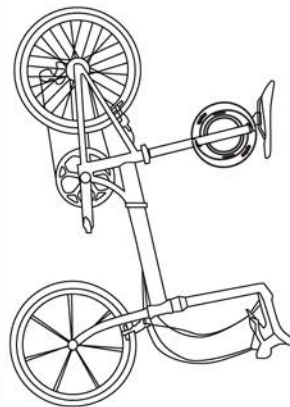


F

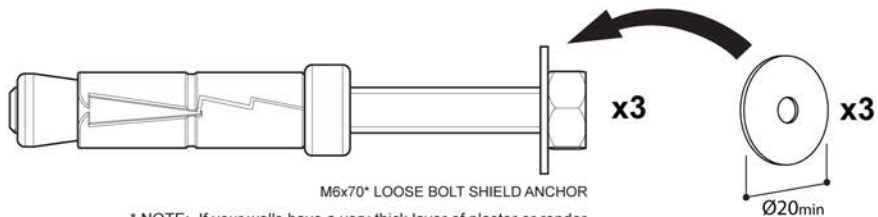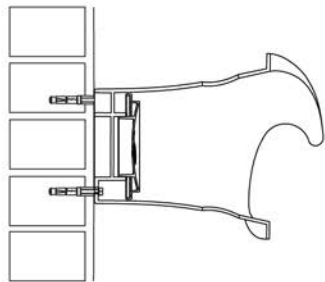



M6x70* LOOSE BOLT SHIELD ANCHOR

* NOTE: If your walls have a very thick layer of plaster or render use a longer fixing to ensure the anchor is in the brick.

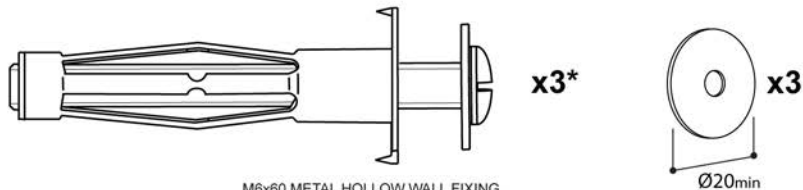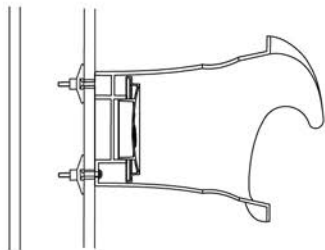

M6x60 METAL HOLLOW WALL FIXING





*NOTE: when the Cycloc is mounted on a hollow wall, the structure must be capable of taking the additional load. Ideally at least one hole should be into a 'timber stud' - with a suitable size of wood screw.

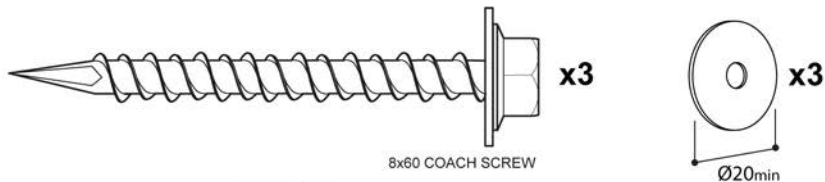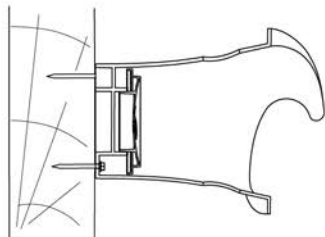

8x60 COACH SCREW

Scale 1:1


LOCATE

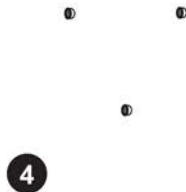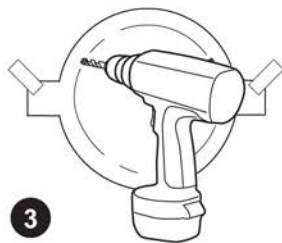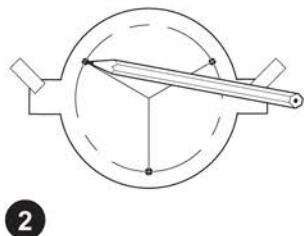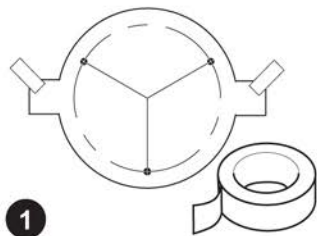

CHOOSE





A





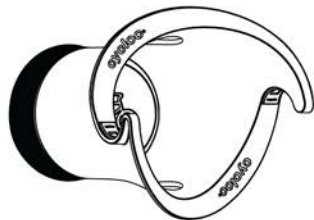


B









USE

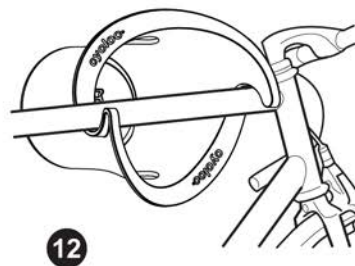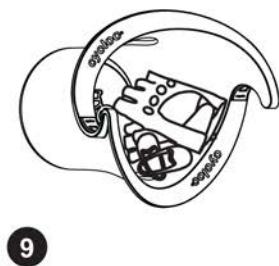

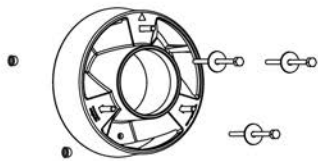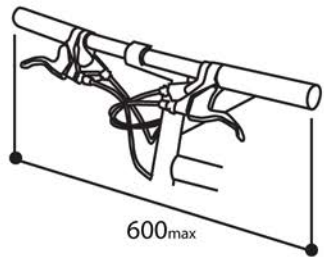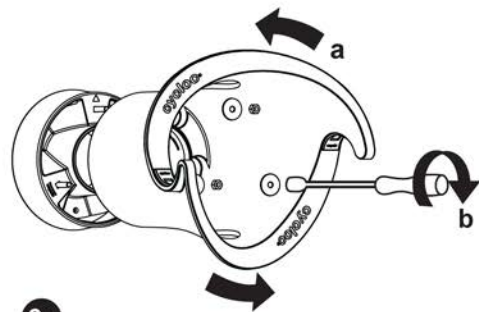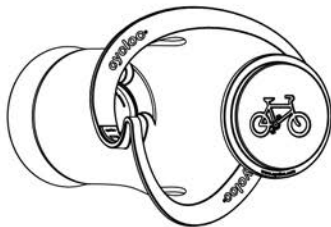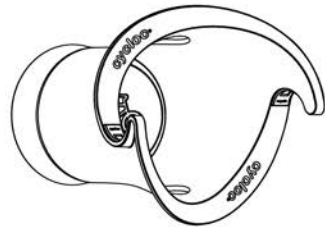B**5B****6B****7B****8B**

A

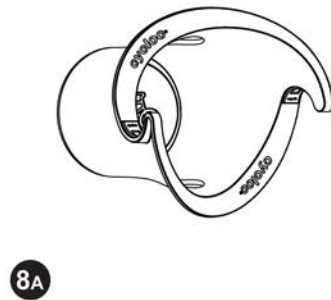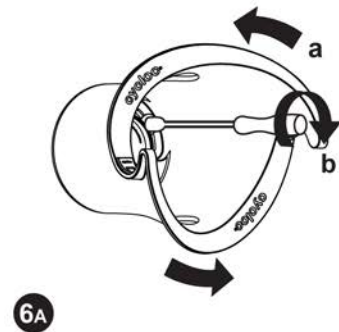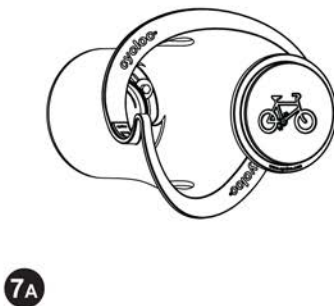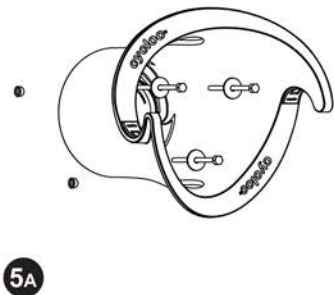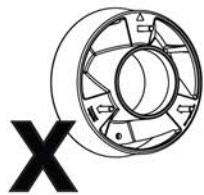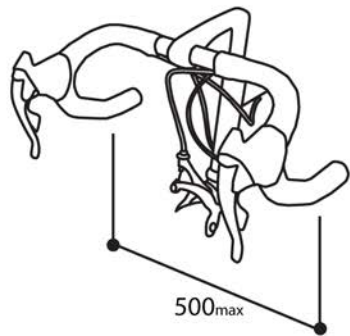

HORIZONTAL - SEATPOST (GUIDANCE ONLY)

